

# Arm Puller Assembly Instructions

1. Mount arm on base.
2. Install roller attachment to end of arm.
3. Attach wire harness to motor top and to hand control. Do not mount or attach solenoid to metal. Protect solenoid from splashing and water as much as possible. (See Quick Start guide.)

For long lasting trouble free operation:

Remove contents from a 1/2 gallon Clorox bottle and wash it out. Cut the top from the bottle and slip the bottom half over the motor, cutting holes on the side to let the wires out. Be sure to seal around these holes. This will help protect the motor terminals from moisture and weather.

Your hauler is designed to run in either direction by simply reversing the polarity. This hauler was designed so that the arm, splitter and hand control can be mounted on either side of the sheaves.

**Good Luck!**

