

QUICK START

Dear Fisherman:


Congratulations and thank you for becoming an Electra-Dyne customer.

When this unit was picked up by the transportation company (carrier) that delivered it to you, it was in good condition. *Safe delivery is the responsibility of that carrier.* If upon unpacking this shipment, concealed damage is discovered, you must, according to federal law, place a claim with the carrier. Electra-Dyne Co., Inc. cannot do this for you. The carrier will simply refuse the claim.

In order to collect for concealed damage, the carrier must be called within 15 days. You must leave the damaged unit and packing material until the carrier has inspected them. The carrier will not accept a claim if the merchandise has been moved from the point of the carrier's delivery to another location (address).

Occasionally, during shipping, the splitter (rope knife) on your hauler may come out of alignment. It is a simple matter to readjust it. First, sight between the sheaves (discs) to see if the splitter has to be raised or lowered so that it won't rub against the sheaves. Next, locate the three bolts that attach the splitter to the backplate. If you need to raise the point of the splitter, simply tighten the outside two bolts. If you wish to lower the point of the splitter, tighten the single bolt located towards the center of the hauler. By tightening and/or loosening these three bolts, you can control the splitter's position thereby extending the life span of your sheaves.

Also, we make the following recommendations to help keep your trap hauler running trouble free:

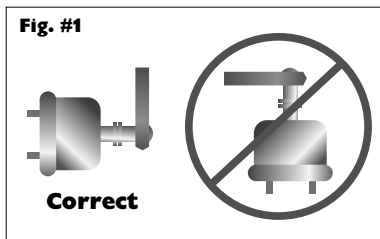

1. Coat the terminals with Vaseline or some other type of anti-corrosive jelly.
2. When loosening the nut on the motor terminals, be sure to loosen the outer nut only while gripping the inner nut to keep it from becoming loose.
3. Change the oil in your gear reducer once a year. Use only Mobilgear™ #636 oil available from your dealer or directly from Electra-Dyne.
4. Periodically, clean your hauler with fresh water to prevent salt from damaging its finish.
5. Occasionally, check the silicone seal between the motor and gearbox. Excessive salt, sun, and age could cause the silicone to lose its adhesive quality.
6. Your hand control will last longer if it is installed so that the handle is positioned vertically, not horizontally. (Figure #1)
7. Your solenoid should be protected against moisture as much as possible. A helpful tip: Mount the solenoid inside a plastic container (i.e. Cool Whip, Tupperware, etc.). Cut holes to allow the wires in and then seal around the holes and put on the lid. Works great!

Your Electra-Dyne hauler has been carefully designed and assembled to give you years of trouble free use. If you have any further questions or problems, feel free to contact your dealer or Electra-Dyne directly.

Good luck!