




Electra-Dyne Co., Inc.
P.O. Box 1344
Plymouth, MA 02362
tel: (508) 746-3270
fax: (508) 747-4017
mail@electra-dyne.com
www.electra-dyne.com

Hauler Wiring Diagram

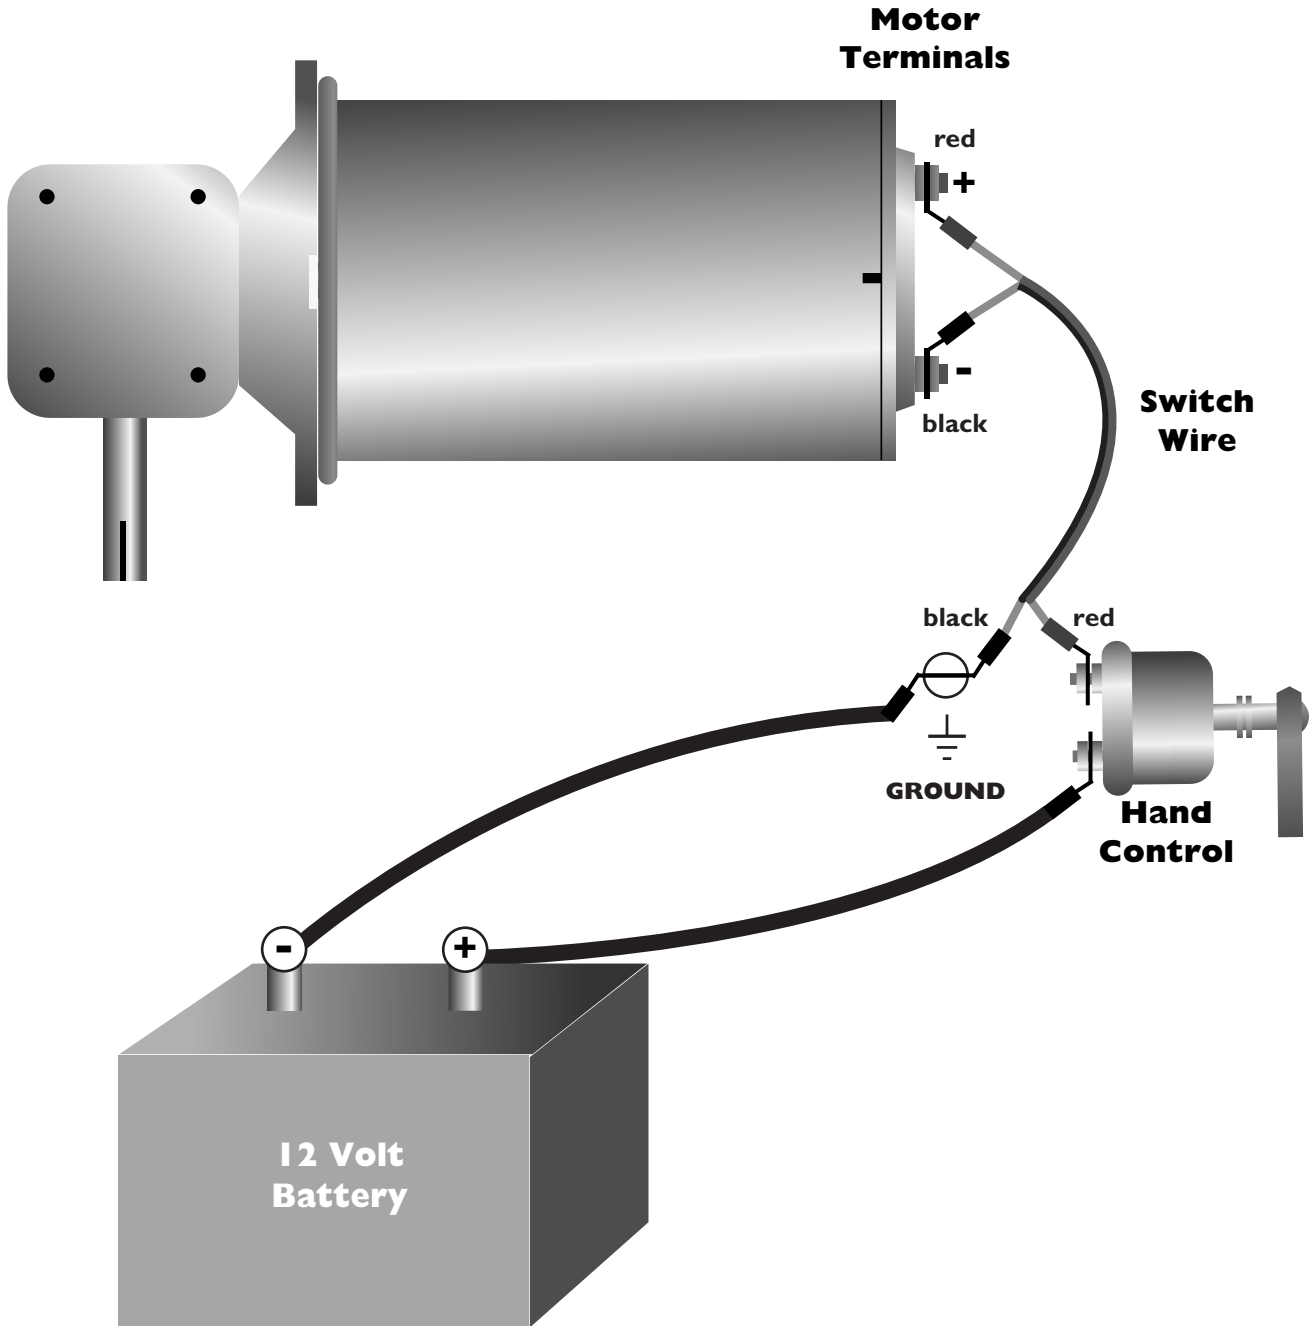

**To make the sheaves turn in the opposite direction,
simply reverse the polarity at the motor.**