


Electra-Dyne Co., Inc.
P.O. Box 3545
Plymouth, MA 02361
tel: (508) 746-3270
fax: (508) 747-4017
mail@electra-dyne.com
www.electra-dyne.com

Rope Deflector Installation Instructions

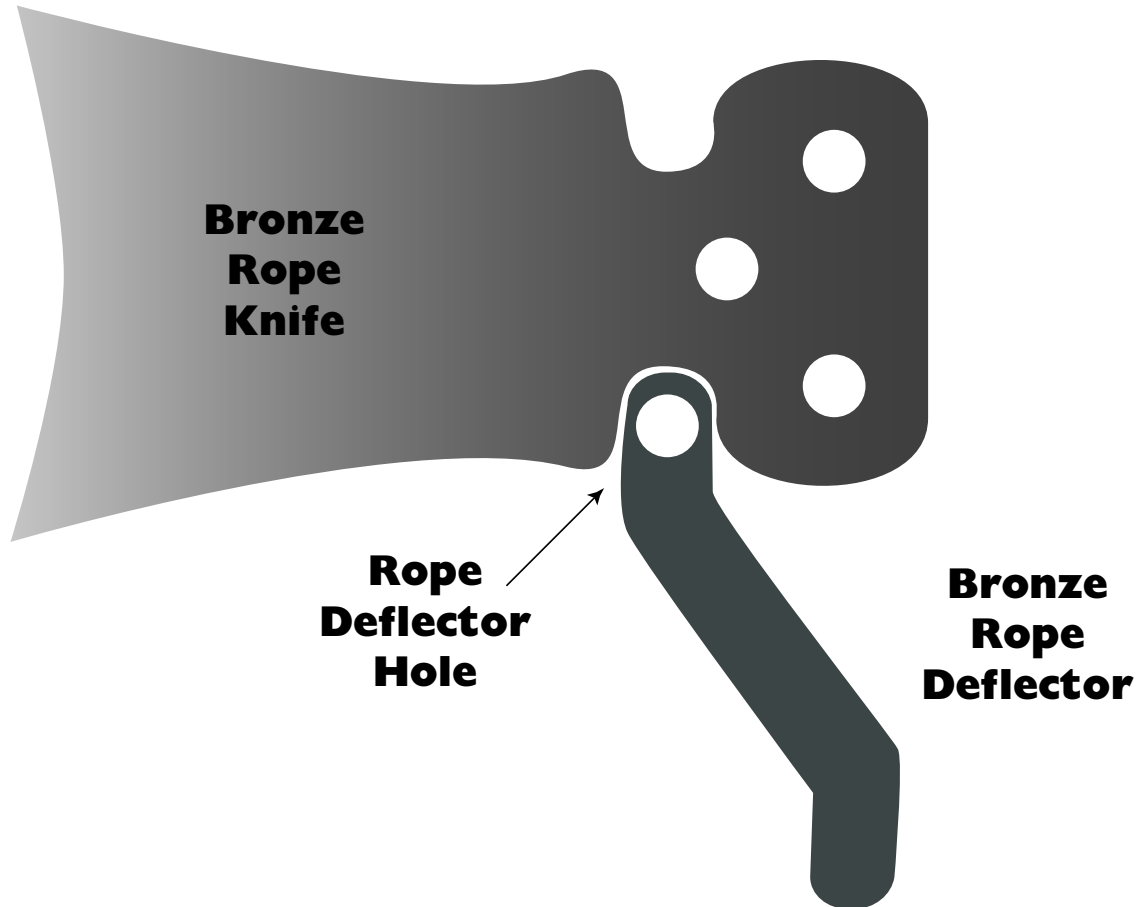

1. Mark for hole to be drilled so deflector will fit in rope knife notch.
2. Drill hole using 17/64" bit.
3. Hand tap using 5/16" 8-thread tap.
4. Install deflector with included bolt.